


Appendix C: Pipe Gaps

There are many factors affecting the best distance between the pipe and the turbine, like inlets and bypasses etc. so please refer to the airplane manufacturer and use this table just as reference

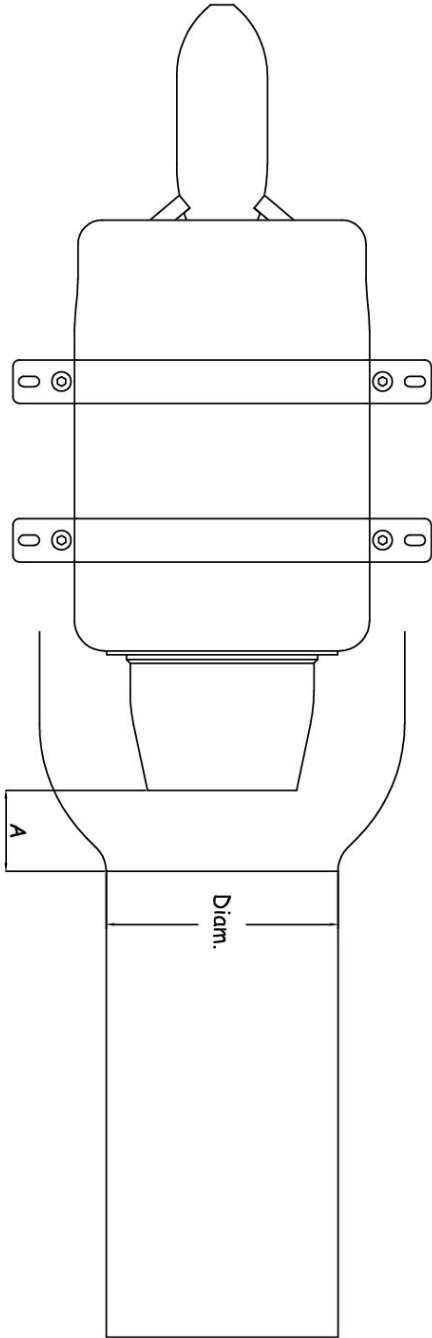

Some Notes:

The bigger the diameter of the pipe, the smaller the distance "A" you have to set

It is worse to be too close to the pipe than too far away

You can use a bigger pipe diameter than recommended but never smaller

Maintain the turbine and pipe always aligned and centered

	A max.	A min.	Diam. max.	Diam min.
Turbine				
Bee	22 mm	12 mm	75 mm	55 mm
Rabbit	25 mm	15 mm	80 mm	60 mm
Cheetah	30 mm	20 mm	90 mm	70 mm
Rhino	32 mm	22 mm	120 mm	80 mm
Mammoth	40 mm	30 mm		100 mm